


Model 42/62/82 Supply Pressure Rating

NOTE: Required Supply Pressure = Discharge Pressure divided by amplification ratio of pump, see selection chart

NOTE: Add 15 PSI to Required Supply Pressure to allow for pressure differential of pump

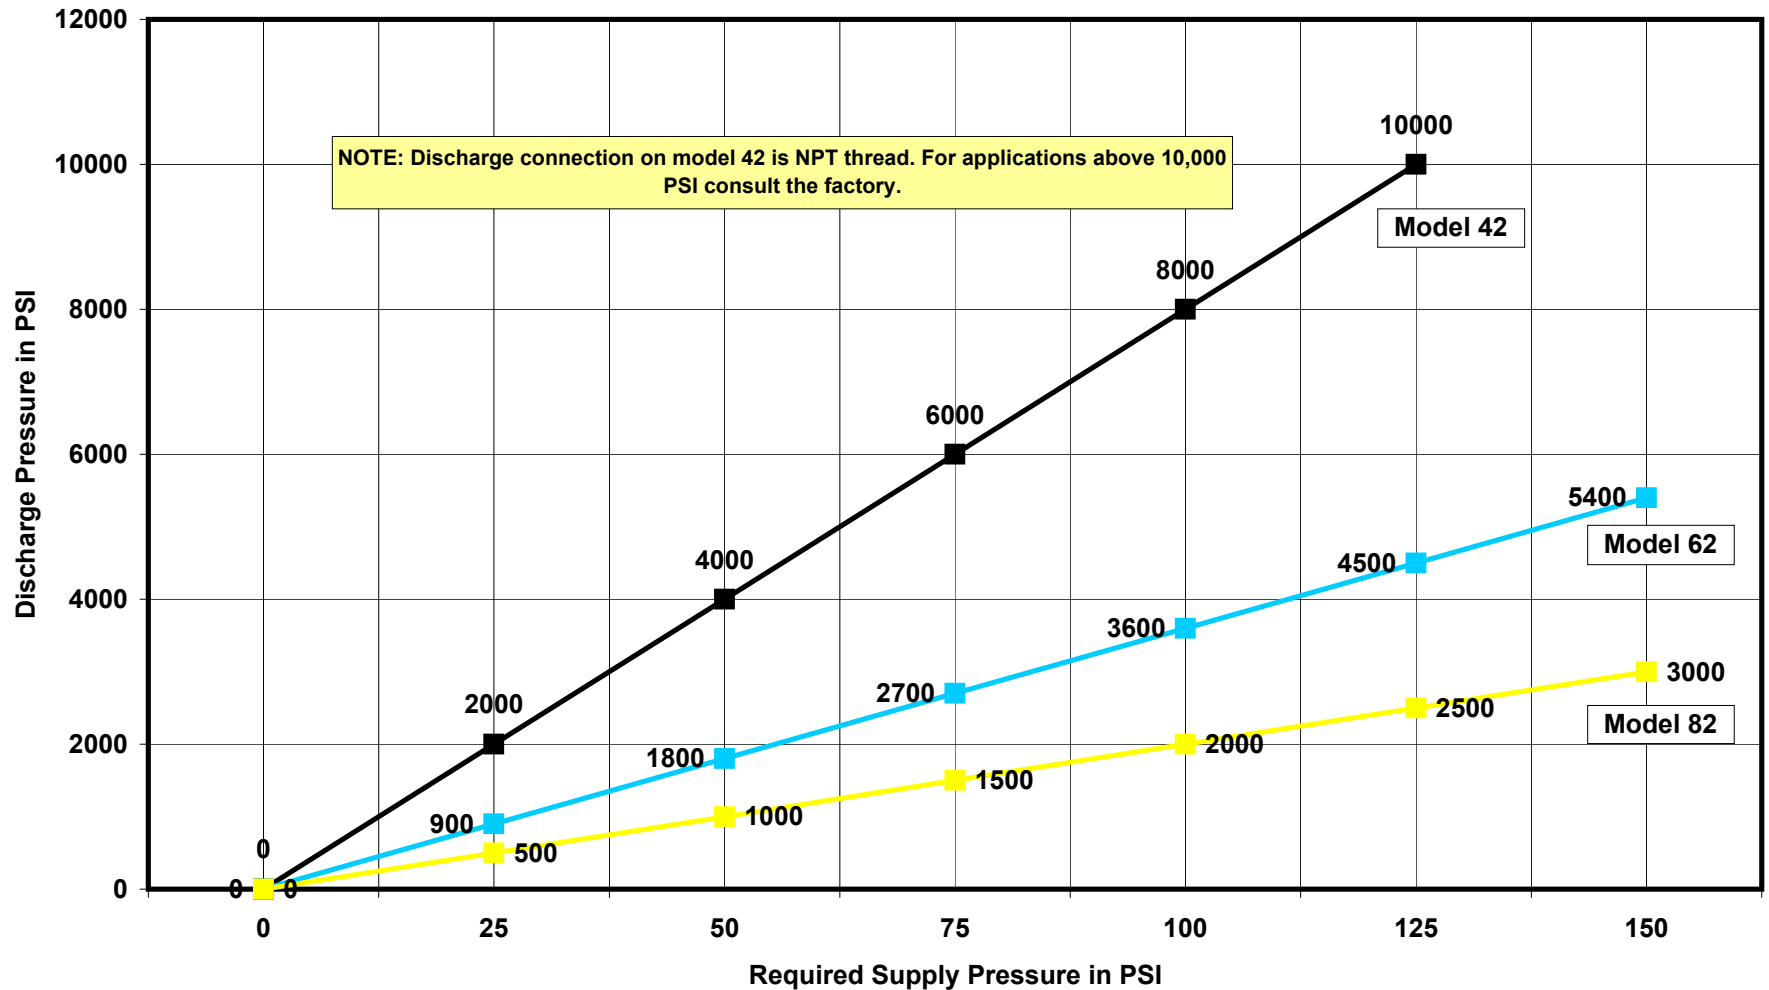

NOTE: Discharge connection on model 42 is NPT thread. For applications above 10,000 PSI consult the factory.

NOTE: All pressures are approximate, system design and system component's may affect actual pressure requirements