

## QUICK START GUIDE – SIDEWINDER SOLAR TIMER

*(After proper installation as detailed in Sidewinder’s Install Guide)*



**PRIMING THE PUMP:** Switch the RUN/OFF/SET switch to “SET” and press MODE until “Pr” is displayed. Pressing the “SELECT VALUE” button will cause the motor on the pump to run as long as the button is held down.

**SETTING OUTPUT RATES:** Find the “Run Time” and “Cycles/Minute” values for your desired output on the output tables supplied in your timer manual or at our website.

1) **SET RUN TIME:** Set the toggle switch to “OFF”. Hold down both the “MODE” and “SELECT VALUE” buttons, then switch the toggle switch to “SET”. The LED readout will show “rUn”. Release both buttons, then press “SELECT VALUE” until the LED readout shows the desired run time from the chart. Return the toggle switch to “OFF”

2) **SET CYCLES/MINUTE:** Set the toggle switch to “SET”. Press “MODE” until the display shows “CYC”, then press “SELECT VALUE” until the LED display shows the desired number for cycles/minute from the table. Return the toggle switch to “OFF”.

3) Set the toggle switch to “RUN” to begin normal operation. Always use a pump setting gauge to insure that the desired output value is being achieved.

4) **MORE INFO:** Go to [www.sidewinderpumps.com/solar-pumps.html](http://www.sidewinderpumps.com/solar-pumps.html)

(REV080416)

## QUICK START GUIDE – SIDEWINDER SOLAR TIMER

*(After proper installation as detailed in Sidewinder’s Install Guide)*



**PRIMING THE PUMP:** Switch the RUN/OFF/SET switch to “SET” and press MODE until “Pr” is displayed. Pressing the “SELECT VALUE” button will cause the motor on the pump to run as long as the button is held down.

**SETTING OUTPUT RATES:** Find the “Run Time” and “Cycles/Minute” values for your desired output on the output tables supplied in your timer manual or at our website.

1) **SET RUN TIME:** Set the toggle switch to “OFF”. Hold down both the “MODE” and “SELECT VALUE” buttons, then switch the toggle switch to “SET”. The LED readout will show “rUn”. Release both buttons, then press “SELECT VALUE” until the LED readout shows the desired run time from the chart. Return the toggle switch to “OFF”

2) **SET CYCLES/MINUTE:** Set the toggle switch to “SET”. Press “MODE” until the display shows “CYC”, then press “SELECT VALUE” until the LED display shows the desired number for cycles/minute from the table. Return the toggle switch to “OFF”.

3) Set the toggle switch to “RUN” to begin normal operation. Always use a pump setting gauge to insure that the desired output value is being achieved.

4) **MORE INFO:** Go to [www.sidewinderpumps.com/solar-pumps.html](http://www.sidewinderpumps.com/solar-pumps.html)

(REV080416)